


Planterboxdirect.com- Bottom kit

1. Locate all parts. 1-bottom or 2 halves for 6 ft, 4(2ft), 6- 4ft, 9- 6ft- color match screws.
2. Locate the hole on the bottom for each screw. (2ft will have (1) hole in the center, 4 & 6ft will have (1) hole on both sides of the long side panel, 6 foot will also have 3 holes located at either end of the panel.
 - a. 6 foot bottom ONLY. Our bottoms will come In parts. Locate both 3 foot panels, locate the 3 holes at either end of each 3 foot panel. With your bottom facing down (90° angle down) Screw (1) hole in (1) half panel
3. Place your bottom down with the 90° edge angle down.
4. Using a pair of vice grips or a clamp (not included), carefully secure the bottom flap to the planter side panel.
5. Locate (1) screw from the box, using the (¼" bit and drill or ratchet not included) secure the screw snug to the box. *Our screws are designed to screw through steel. If you are having an issue use the 3/16 drill bit and drill (not included) to drill a pilot hole.
6. Repeat step 5 for the remaining bottom holes.
7. Your planter box is now complete. ENJOY!

** We've designed the panel in a way where you can drill a hole in the center of bottom to allow water run off.



Required tools (not included) (Drill, 3/16 drill bit, clamp or vice grips, ¼" driver or Ratchet with ¼" drive)

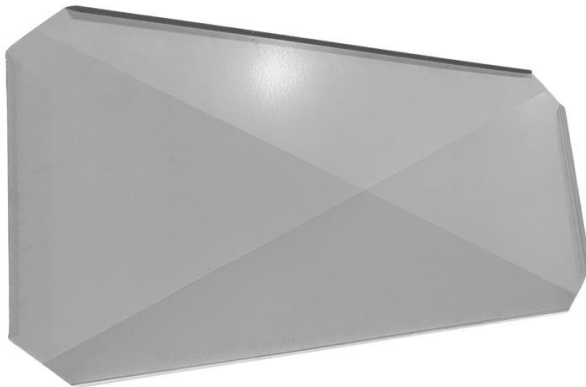

www.planterboxdirect.com

Like and Share on Facebook

