

Planterboxdirect.com- **DOUBLE HIGH** - Planter Box Assembly Instructions

1. Locate all parts. 4- side panels, 4- end panels, 4- **double high** outside corners, 38- color match screws, 4 rubber caps.
2. Locate the HEM section of the panels and outside corners (top)
3. Begin by constructing your double high side walls. Locate (5) screws. Match the pilot holes to each panel (be sure top panel overlaps bottom panel). Start with the center hole and work your way to one side and then the other side. (DO NOT fasten the end screws, yet)
4. With HEM section UP, align top piloted hole on (1) double high outside corner to (1) end panel, using a ¼" bit (not included) screw in until snug
5. Align the remainder of the piloted holes, using a ¼" bit (not included) screw in until snug
6. Repeat steps 4 & 5 until each end panel (2) has 2- double high outside corners screwed on to each panel
7. Locate 1 double high side panel, with the HEM up align the top piloted hole on (1) corner to the side panel, using a ¼" bit (not included) screw in until snug
8. Align piloted holes, using a ¼" bit (not included) screw in until snug
9. Repeat steps 7, 8 & 9 until each side panel (2) have been screwed onto the outside corners.
10. Your planter box is now complete. Enjoy!



Required tools (not included) (Drill, ¼" driver or Ratchet with ¼" drive)




www.planterboxdirect.com

Like and Share on Facebook

**See reverse side for example photos



A

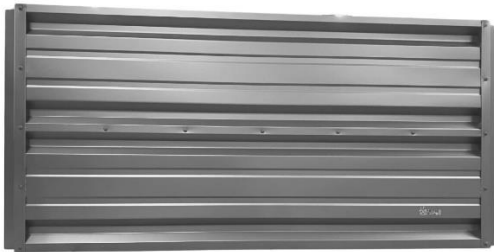

B



C

- A- End Panel
- B- Side Panel
- C- Double high outside corner