

Planterboxdirect.com –L Shaped Planter Box Assembly Instructions

1. Locate all parts. 16 3ft panels, 28 outside corners, 138 color match screws, 44 rubber screw caps, 12 cross braces (12x12)  
12 3ft panels, 20 outside corners, 97 screws, 32 rubber screw caps, 8 cross braces (9x9)  
10 3ft panels, 16 outside corners, 81 screws, 26 rubber screw caps, 6 cross braces (9x6)
2. Start by removing the protective plastic from each panel and outside corner.
3. Locate the HEM section of the panels and corners
4. Locate (2) outside corners from your box. With the Hem end up, place the (2) corners paint side down to make a 'W'.
5. Align the (3) piloted holes. Using a ¼ bit and the screws included, screw in the top leaving the center and bottom out. Do the same for the other (7) to make the extension connections  
**(Pictures on reverse side for better representation)**
6. Locate (3) more outside corners from your box. Perform step 4 & 5. Place another corner in the same direction to your existing 2 piece corner (extension connections) and screw the top holes. You should have made (2) inside corners.
7. SET THESE ASIDE FOR FUTURE STEPS.

BUILDING THE SIDE (2) AND END WALLS

8. Locate (1) 3ft section, (1) corner piece and (3) screws. Align the 3 piloted holes and HEM to the top. Using (3) screws and ¼" bit not included, screw in the screws.
9. Locate (1) extension connection and (3) screws. Attach the extension connection to the 3 ft panel.
10. Locate (1) 3 ft section and (3) screws. With the HEM side up attach to the extension connection.
11. Locate (1) extension connection and (3) screws. Attach the extension connection to the 3 ft panel.
12. Locate (1) 3 ft section and (3) screws. With the HEM side up attach to the extension connection.
13. REPEAT steps 8-12 (2 times)
14. Locate (3) screws and (1) END WALL you just made. Line up the holes in the corner to the SIDE WALL. Using a ¼" bit not included screw in the corner to the END wall. REPEAT 2 times. (
15. Now locate (1) 3ft section, (1) corner and (6) screws. Align pre-piloted holes in your 3ft section with the outside corner attached to the SIDE WALL. Screw in (3 screws).
16. Locate your corner piece with the HEM side up and (3) screws. Attach to the other side of the 3ft panel.
17. Repeat step 15 to the other side of your planter box.
18. Locate (1) 3ft panel (3) screws and attach to the open corner.
19. Repeat step 18 to the other side of your planter box.
20. Locate (1) extension connection (previously made) and (3) screws. With the HEM side up attach to your 3ft panel.
21. Repeat step 20 to the other side of your planter box.
22. Locate (1) 3ft panel (3) screws and attach to extension connection.
23. Repeat step 22 to the other side of your planter box.
24. Locate (1) Inside corner (3) screws, with the HEM side up attach to the 3ft panel.
25. Repeat step 24 on the other side of your planter box.
26. Locate your last 3ft panel and (6) screws. Screw in one side of the inside corner to the panel and then the other.

PLACING THE BRACING IN YOUR BOX

27. You will use the remaining screws and the (12) braces in the next step.
28. Attach 1 end of the brace to the center of the extension connection and inside corner using (1 Screw).

29. Attach the other side of the brace to the bottom of the adjacent side using (1 screw).
30. Do this for each brace throughout the box and each extension connection and inside corner.
31. Finally, using (1) screw, screw the center of each brace.
32. Your kit includes 44 rubber caps to be used on the top screws around your box.




Required tools (not included) (Drill, 1/4" driver or Ratchet with 1/4" drive)



[www.planterboxdirect.com](http://www.planterboxdirect.com)

Like and Share on Facebook

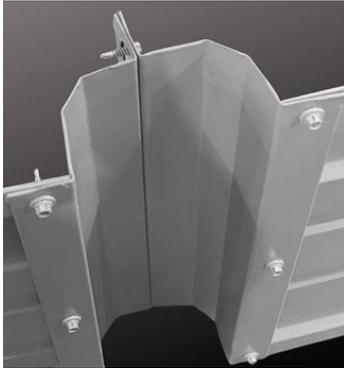

- Extension Connection



-Inside Corner

