

Planterboxdirect.com- Bottom Kit Assembly Instructions

Required tools (not included), Drill (1/4" hex bit), Gloves, Safety Glasses




Caution – Metal may be sharp, wear gloves to protect your hands.

Caution – Wear proper eye protection to protect from debris while screwing.



1. **Locate all parts. -Below Is NOT what you will have... Find your bottom style and be sure you have all your parts.**

- **6ft Bottom Contents**- 2 half bottoms, 9 color match screws
- **4ft Bottom Contents**- 1 bottom, 6 color match screws
- **2ft Bottom Contents**- 1 bottom, 4 color match screws

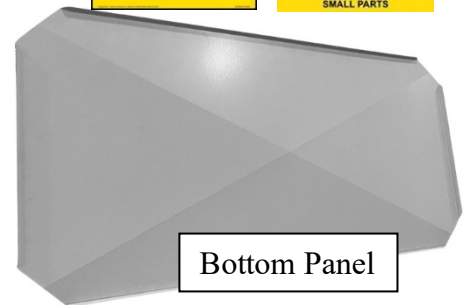

2. Locate the holes on the bottom for each screw.
(All bottoms will have (1) hole on each end)
 - **6ft Bottom holes**- **SIDE** 5 holes (Half plates will overlap for center hole)
 - **4ft Bottom holes**- **SIDE** 3 holes
 - **2ft Bottom holes**- **SIDE** 1 hole
3. Place your bottom down with the 90° edge angle down. (The flat side should be on the inside of the planter box)
4. Locate (1) screw from the box, using the 1/4" hex bit secure the screw snug to the box (Through the box's side panel and bottom panel pilot hole). **SCREW BOTH ENDS IN FIRST**
5. Repeat step 5 for the remaining bottom holes.
6. Your planter box is now complete. ENJOY!

** We've designed the panel in a way where you can drill a hole in the center of bottom to allow water to run off **

www.planterboxdirect.com
Like and Share on Facebook